## XP12 error messages

## K0

K0 indicates and undefined and unrecoverable printing error. Check the LED Display on the Raven for status code report; follow instructions to fix problem, then type <CR>. If no status code report shows and On-Line LED is lit, Press doesn't like your file. Type Shift-Swat or boot; when the executive comes back, type Press rep <CR> to try a reprint. If this fails, type @Server.cm and go fix your file.

## K1

K1 indicates that the printer is out of paper. The LED status code display on the printer will say C4. Follow the directions on the printer to refill, being sure to refill both cassettes and to replace each cassette in the slot whence it came. The curl goes up. If the status codes still complain, wiggle the cassettes and the locking handle until it's happy. When the status codes are contented, type  $<\!CR\!>$  and the file will print.

## K2

K2 indicates that the printer has shut itself down from lack of use {a feature of Raven printers}. The print request will restart the Raven; until it is ready the LED status code display on the printer will say L1. After 5 to 10 minutes the status code display will go blank, leaving the On-line LED lit; type <CR> and the file will be printed. If you arrive and the On-line LED is lit and the status code display is already blank, the printer has already warmed up; type <CR>.