

# TABLE OF CONTENTS

---

<b>1. XEROX 1108 OVERVIEW</b>	1
Operations Overview	1
The Local Disk	2
The Keyboard	2
Booting the Xerox 1108	3
Software	4
Setting Date and Time	5
The Lisp Sysout	5
Installing Software From Floppies	6
Installing Sysouts From File Servers	6
Installing Sysouts From the Local Disk	7
Starting Lisp	7
Loading Interlisp-D Packages	8
Maintenance Panel Codes	9
The Ethernet	10
Copying Files Between Machines	11
The Floppy Disk Drive	12
Summary	12
<b>2. BASIC OPERATIONS</b>	15
Components	15
The Display	15
The Keyboard	15
The Mouse	15
The Processor	17
The Rigid Disk	17
The Floppy Disk Drive	18
Service Considerations	18
RS232	19
Operations	19
Turning On the Processor	19
Booting the Processor	20

Turning Off the Processor	21
Routine Maintenance	22
Cleaning the Floppy Disk Drive Heads	22
Cleaning the Mouse Pad and Checking the Mouse	23
Cleaning the Display Screen	23
Cleaning the Keyboard	23
Basic Troubleshooting	24
Reporting Problems	25
<b>3. THE FILE SYSTEM</b>	<b>27</b>
Introduction	27
Disk Partitions	27
File System Utility Functions	28
File Name Conventions	30
Disk Scavenging	31
<b>4. SOFTWARE INSTALLATION</b>	<b>35</b>
Introduction	35
Setting the Time (when requested only)	36
Software Installation Procedure	37
Partitioning the Rigid Disk	37
Installing Utility Software on the System Tools Volume	40
Installing Interlisp-D Software on the Lisp Volume(s)	42
Starting Interlisp-D/Choosing a Lisp Volume	45
<b>5. SYSTEM TOOLS</b>	<b>49</b>
The Profile Tool, Lisp System Tools and Diagnostics	49
The Profile Tool	49
Parameter Items	52
The Lisp System Tools	53
Parameter Items	55
Command Items	58
The Online Diagnostics Tool	63
Parameter Items	66
Command Items	66

---

<b>6. INPUT/OUTPUT</b>	67
Floppy Support	67
Naming, Erasing, and Formatting Floppies	68
Copying Floppies	69
Archiving to Floppies	70
Loading SYSOUTs and	
Other Large Files Onto Floppies	70
Using CPM-Formatted Floppies	71.1
Manipulating Floppy Space	71.2
Testing Whether a Floppy Is in the Drive	71.2
Scavenging Floppies	71.3
RS232 Support	72
RS232 Cable Configuration	
for RS232C Port and TTY Port	72
Special Adaptor Cables for the TTY Port	73
Certain Devices with DTE Interface	
and Female Connectors	75
Testing the Connection Between	
Two Xerox 11-- Machines	76
Testing the Connection Between Xerox	
11-- Machines and a VAX/VMS	77
File Transfer	77
Use of RS232LOGIN	79
<b>7. MACHINE DIAGNOSTICS</b>	81
Use of the Fixed Disk Diagnostic Floppy	81
ALT-5 and ALT-2 Boots From the	
Fixed Disk Diagnostic Master Disc	81
ALAG	81
Failures in ALAG	84
<b>8. MP CODE SUMMARY</b>	85
Summary of MP Code Ranges	85
Boot-Time Errors	86
0200-0299 Booting Phase 2 (initial microcode)	86
0500-0502 Domino Progress Codes	86
0505-0599 Domino Error Codes	87
0900-0999 Pilot Codes	88
9000-9299 Interlisp-D Microcode Error Detected	89
9300-9399 Lisp System Code Error (call to\MP.ER)	90

## TABLE OF CONTENTS

---

9400-9899-Unassigned	93
9900-9924 Attempt to Call Raid or Alto O.S.	93