

BASEBOARD Flashes

- 1 Normal Wait**
- 2 Can't Boot**
- 3 Transient Power Problem**
- 4 Current Power Problem**
- 5 Power Down**
- 6 Over Temperature**
- 7 Can't Get Control From Midas**